



ENGLISH Instructions

PROGRAMMING OF YOUR NEW KIT

Press **P1**

1 time to program CH1 in monostable mode

2 times to program CH2 in monostable mode

3 times to program CH1 in bistable mode

4 times to program CH2 in bistable model

Keep pressed the key of the remote control that you wish to copy until the LED blinks

ERASING

erasing a single code:

press P2 for about two seconds (release the key); LED shall light up, press the key of the remote control to be deleted

erasing all codes entered

press P2 until the LED turns on (about 8 seconds)

