




ASSEMBLY INSTRUCTION

NC*FRX & NC*MRX | XLR Cable Connector


- (A)** Slide the boot onto the cable.
- (B)** Prepare cable as shown.
- (C)** Insert wires into the terminals and solder them.
- (D)** Position the sleeve over the cables.
- (E)** Slide insert into the housing until it snaps in.
Align insert with housing.
- (F)** Position the cable.
- (G)** Slide the chuck into the housing.
Pay attention to position chuck as shown.
-
-
-
-
-
-
-

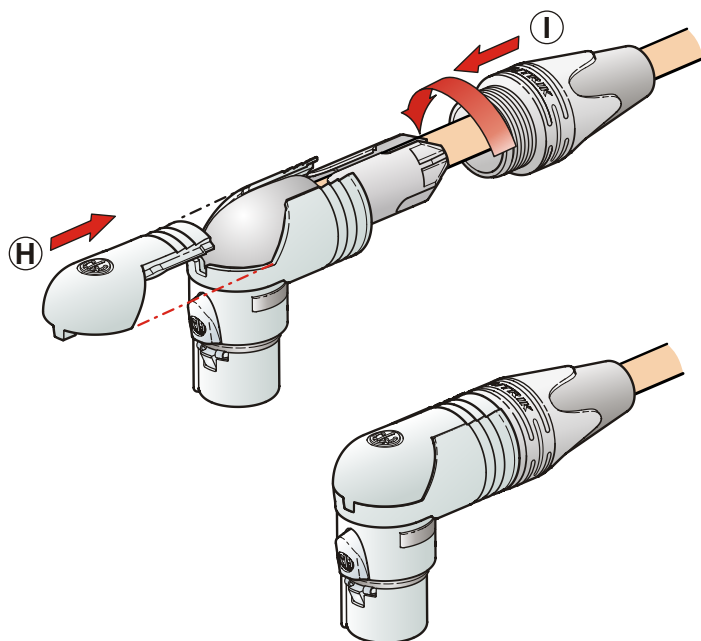

H Position the cover.

Before placing the cover choose the orientation of cable outlet by turning housing.

I Finish the assembly by turning the bushing onto the connector.

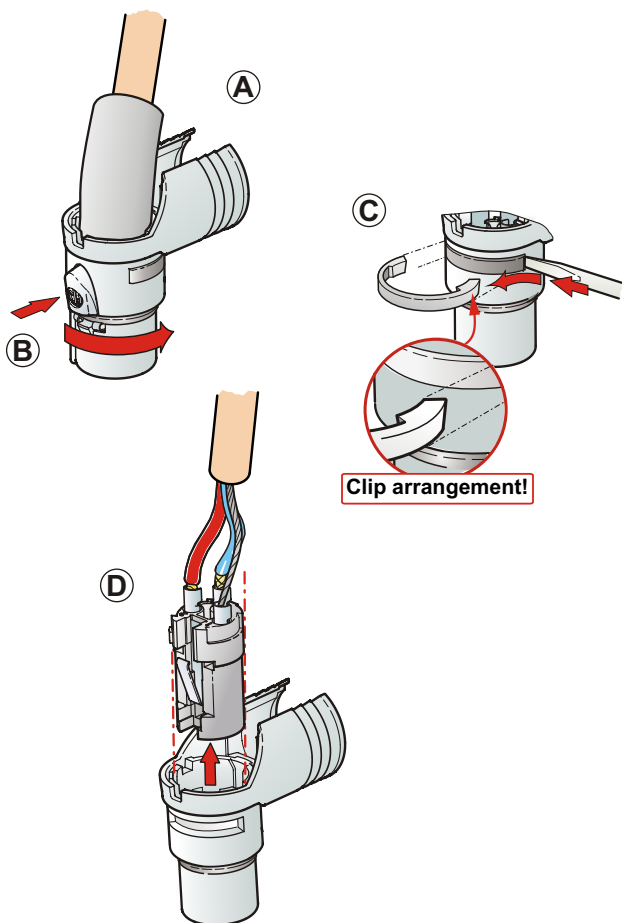

Disassembly of the insert

A Remove cover and chuck.

B Push latch and turn housing approx. a half turn until housing can be separated.

C Lift the locking clip by help of a screw driver.

D Remove insert.